

PAIRING INSTRUCTIONS:

STEP 1: Disconnect the connection between the KTI Pump and wireless module. Ensure that the yellow pendant remote is conneted to the wireless module.

STEP 2: Open EZR Remote, press select button until the Telescopic row has the red light next to it.

STEP 3: Press and hold the Up and DN buttons on the Yellow that correspond with the telescoping function (about 3 seconds) until an audible beep is heard from the wireless module. Release the buttons. Press and hold the Open and Close Buttons on the EZR remote until the red light turns solid. Release the buttons. An audible double beep will sound from the reciever.

Step 4: Repleat steps 2 & 3 for the Jack Function.

Step 5: Connect the KTI plug with the Wireless Module pulg to verify operation of the Jacks and Telescopic Cylinder.

REVISIONS				
ZONE	REV.	DESCRIPTION	DATE	REVISOR
	0	Initial Release	2/24/2025	JV

STEP 1



STEP 2 & 3



BEEP

STEP 4



BEEP

STEP 5



 


BEEP BEEP



BEEP BEEP

The information contained in this document is confidential, privileged and only for the use of the intended recipient and may not be used, published or redistributed without the prior written consent of Diamond C Trailers.

DRAWING NUMBER	DESCRIPTION	MATERIAL	WEIGHT	THIRD ANGLE PROJECTION	WELDING STANDARDS	DIMENSION STANDARDS UNLESS OTHERWISE NOTED	DRAWN BY
E-00148	SHURCO REMOTE PAIRING INSTRUCTION GUIDE	-	lbs		1. ALL WELDS FULL LENGTH UNLESS OTHERWISE SPECIFIED	ALL ANGULAR DIMENSIONS 90°	JV
			SHEET SCALE		2. SYMBOL STANDARDS: ANSI/AWS A2.4	DECIMAL INCH TOLERANCES ." ±0.1 .XX" ±0.01 .XXX" ±0.005	CREATED ON 02/24/2025
			1:2		3. WELDING STANDARDS: AWS D1.1	FRACTIONAL INCH TOLERANCE ±1/16" ANGULAR TOLERANCE ±1°	SHEET NUMBER 1 of 1




Telescopic Remote Pairing

Step 1: Inside storage box on the front of the trailer, disconnect sealed connector that is running to the pump.


Step 2: Open EZR remote, press select button cycling the channel to Telescopic UP/DN.

Step 3: on yellow pendant control, press and hold bottom two buttons until a audible beep is heard in control box in storage box. Approx 3 seconds.

Release control buttons. Once beep is heard, press and hold open and close buttons on remote until red channel light turns solid. Release buttons. A double beep will sound from receiver.

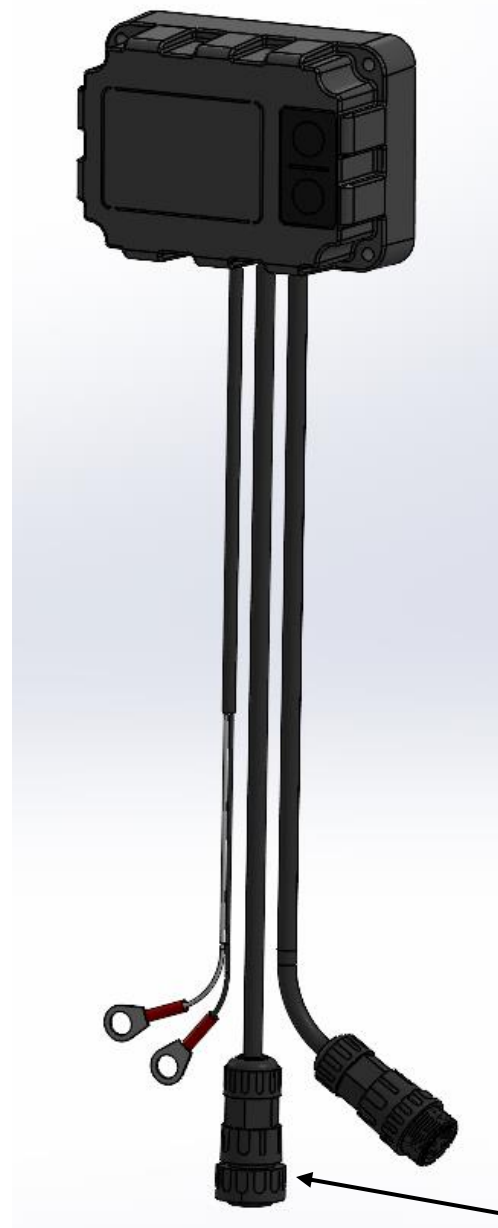

Step 2

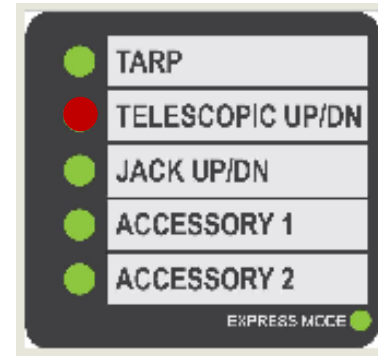

Step 3 b



Step 3 a

Step 4: Open EZR remote, press select button cycling the channel to Jack UP/DN.


Step 5: on yellow pendant control, press and hold top two buttons until an audible beep is heard in control box. Approx 3 seconds. Release control buttons. Once beep is heard, press and hold open and close buttons on remote until red channel light turns solid. Release buttons. A double beep will sound from receiver.

Step 6: Connect control back up to pump. Verify operation of both channels. Repeat steps is channel has not paired.

Jack Remote Pairing



Step 4

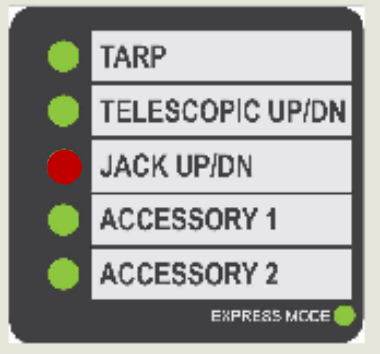

Step 5 b



Step 5 a

Connector to pump